

Lock Installation


NOTE: If your door is going to be equipped with an automatic garage door opener, make sure that the door is always unlocked when the operator is being used. This will avoid damaging the door.

#1 Snap Latch AUTO-LATCH LOCK ASSEMBLY INSTRUCTIONS

1. Slide the outside handle (1) through the holes in the lock section. Remove the paper from the Foam Gasket (2) and place the gasket between the outside handle and the door skin (be sure the adhesive faces the door). (FIG. 20)
2. Slide the two lock spacers (3) through the top and bottom holes of the lock stile and over the spindles of the outside handle.
3. Attach the backing plate (4) to the outside handle (1) using two #10 x 24 machine screws (5).
4. Slide the inside release handle (6) over the shaft of the outside handle and secure in place using the Tinnerman nut (7). Be sure the Tinnerman nut is pressed firmly against the inside release handle.
5. Slide the vinyl sleeve (8) over the arm of the inside release handle.

NOTE: The Spring Latches, Striker Plates and Lock Cables are to be assembled after the door and all other hardware is in place.

#1 Snap Latch

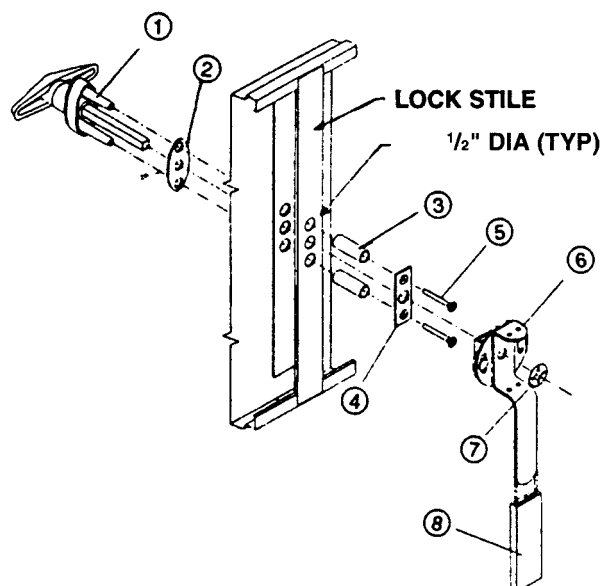

No.	QTY.	DESCRIPTION
1	1	Outside "T" Handle
2	1	Foam Gasket
3	2	Lock Spacers
4	1	Backing Plate
5	2	#10 - 24 Machine Screws
6	1	Inside Release Handle
7	1	Tinnerman Nut
8	1	Vinyl Sleeve

Key blanks are available through Clopay.

Fig. 20